


PANEL DEVELOPMENT CALCULATION - PENTA R6

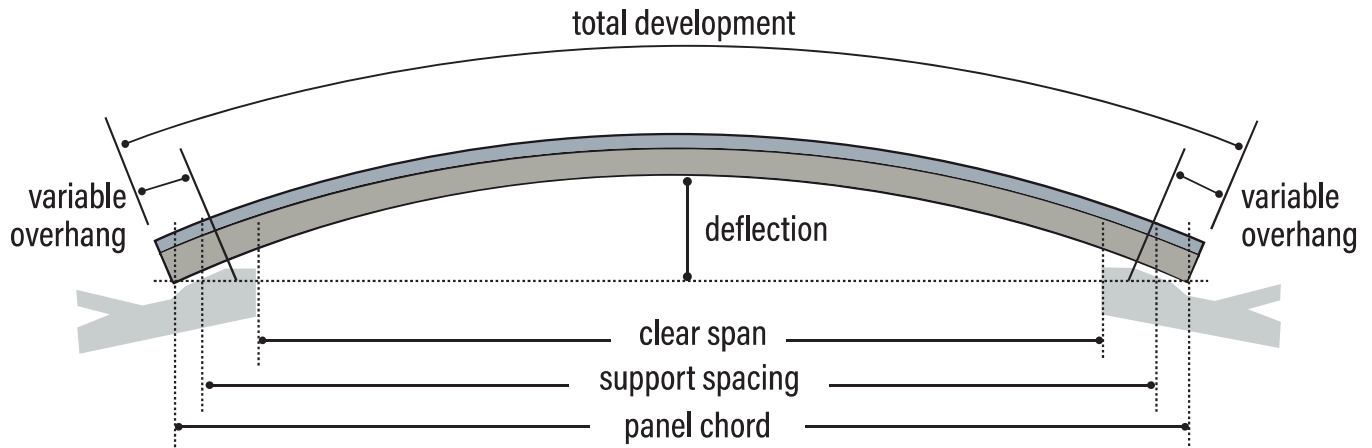

Panel thickness (mm)								
	40	50	60	80	100	120	134	
Chord (mm)	Base rib development (mm)							Deflection (mm)
1750	1770	1775	1775	1780	1790	1795	1800	64.58
2000	2025	2030	2030	2040	2045	2050	2055	84.49
2250	2280	2285	2290	2295	2305	2310	2315	107.14
2500	2540	2540	2545	2555	2565	2570	2580	132.56
2750	2795	2800	2805	2815	2825	2835	2840	160.78
3000	3055	3060	3065	3075	3085	3095	3105	191.85
3250	3315	3320	3325	3340	3350	3360	3370	225.81
3500	3580	3585	3590	3605	3615	3625	3635	262.71
3750	3845	3850	3855	3870	3880	3895	3905	302.62

Panel thickness (mm)								
	40	50	60	80	100	120	134	
Chord (mm)	Base rib development (mm)							Deflection (mm)
4000	4110	4115	4125	4135	4150	4165	4175	345.59
4250	4375	4385	4390	4405	4420	4435	4445	391.70
4500	4650	4655	4665	4680	4695	4710	4720	441.02
4750	4920	4930	4935	4955	4970	4985	5000	493.65
5000	5195	5205	5215	5230	5250	5265	5280	549.68
5250	5475	5485	5495	5510	5530	5550	5560	609.21
5500	5755	5765	5775	5795	5815	5835	5850	672.36
5750	6045	6055	6065	6085	6105	6125	6140	739.27
6000	6330	6345	6355	6375	6395	6415	6430	810.09